



7D firmware version 1.2.5

RECORD SETTINGS

format: 1920/24 (23.976fps)	Video System: NTSC
shutter: 1/50	Picture Style: Neutral
sound: Off	Light Optimizer: Off

QUICK SET-UP


SWITCH SET

- ① SET to Movie Mode
- ② SET to Manual operation
- ③ SET shutter exposure time

Main Dial "☰☷☸☹☺☻☼☽☾☿☽☾☿" ▶ 1/50

MENU SET

1. CLEAR all custom function
☰ Custom Functions ▶ Clear all Custom Func. ▶ OK
2. CLEAR all camera settings
☰ Set-up 3 ▶ Clear all camera settings ▶ OK
3. SET video system
☰ Set-up 2 ▶ Video system ▶ NTSC
4. SET record size/frame rate:
☰ Movie Functions ▶ Movie rec. size ▶ 1920x1080 24
5. SET sound recording:
☰ Movie Functions ▶ Sound recording ▶ Off
6. DISABLE lighting optimizer
☑ Shooting Functions 2 ▶ Auto Lighting Optimizer ▶ Off
7. SET picture (color) style
☑ Shooting Functions 2 ▶ Picture Style ▶ Neutral
8. FORMAT media
☰ Set-up 1 ▶ Format ▶ OK

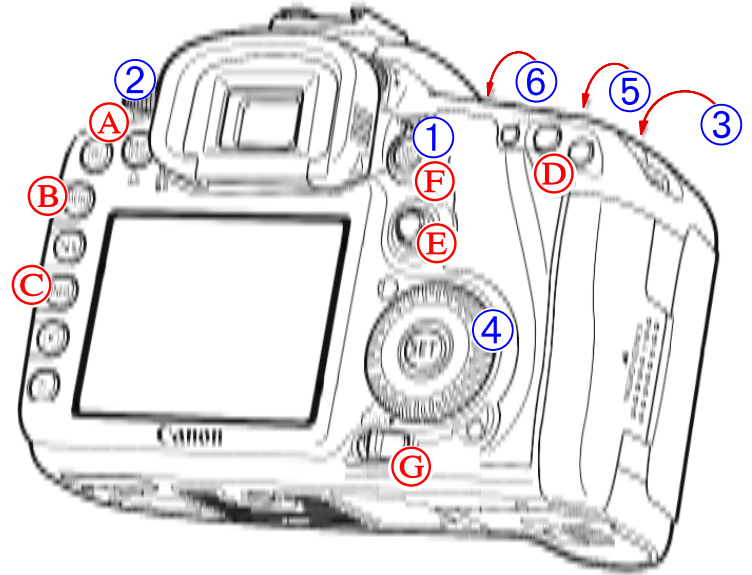

7D BUTTON/SWITCH

① MOVIE/STILL	(switch) STILL MOVIE
② MODE	(turn) Manual variable
③ MAIN DIAL	(dial) iris Tv to Av (Main Dial)
④ QUICK CONTROL DIAL	(dial) shutter(1/50) Av to Tv (Quick Control)
⑤ ISO	(select) variable user defined
⑥ WHITE BALANCE	(select) variable user defined
A POWER	(switch) ON OFF
B MENU	(enter) Enter Exit
C INFO	(toggle) Display Disp.1 exposure settings Disp.2 color settings Disp.3 electronic level
D FOCUS ASSIST	(toggle) x5 x10
E JOYSTICK	(navigate) up down left right enter(push)
F START/STOP	(toggle) record
G LOCK	(switch) LOCK UNLOCK shutter (user set)

ADDITIONAL FUNCTIONS

LOCK shutter

- ☰ Custom Functions ▶ C.FnIV:Operation/Others ▶ 1 (sub menu)
 - a. "☰☷☸☹☺☻☼☽☾☿" Main Dial ③ ☀ : from Tv to Av
 - b. Quick Control Dial ④ ☀ : from Av to Tv
 - c. SET shutter exposure time to 1/50
 - d. LOCK Dial

SELECT iso accordingly

ISO ⑤ 100 · 125 · 160 · 200 · 250 · 320 · 400 · 500 · 640 · 800 · 1000 · 1250
1600 · 2000 · 1250 · 1600 · 2000 · 2500 · 3200 · 4000 · 5000 · 6400

SELECT color temperature accordingly

- Option 1 WB ⑥
- Option 2 ☑ Shooting Functions 2 ▶ White balance ▶ Tungsten 3200K
▶ Daylight ~5200K
▶ Custom
▶ Color temp. °K
☀ toggle (user defined)

SELECT picture style accordingly

- ☑ Shooting Functions 2 ▶ Picture Style ▶ Neutral
▶ User Def. CineStyle (see 7D NOTES)

Focus Assist

Focus Assist ④ (zoom in x5 · x10) ▶ Re-center PUSH Control Joystick ⑤

7D NOTES

CAMERA SUPPORT

1/8" screw needed for Sachtler/O'Connor tripods

PICTURE STYLE (USER DEF.)

Technicolor CineStyle

- a. download Technicolor_CineStyle_pf2 Download LINK blogs.bu.edu/jamie
- b. download Canon EOS Utility Download LINK blogs.bu.edu/jamie
- c. connect 1.) Canon 7D camera to desktop system via USB cable 2.) camera power ON
- d. launch Canon EOS Utility
- e. select 1.) Control Camera 2.) Camera settings/Remote shooting (EOS 7D window opens)
- f. select 1.) camera button 2.) Register User Defined style (Shooting menu)
- g. select 1.) open file 2.) navigate to CineStyle_pf2 file 3.) open 4.) OK
- h. disconnect Canon EOS 7D camera from USB cable
- i. CineStyle stored in Canon 7D menu Shooting Functions 2 ▶ Picture Style ▶ User Def.